



Installing Your Birdhouse

Dig a hole
18" to 24" deep.

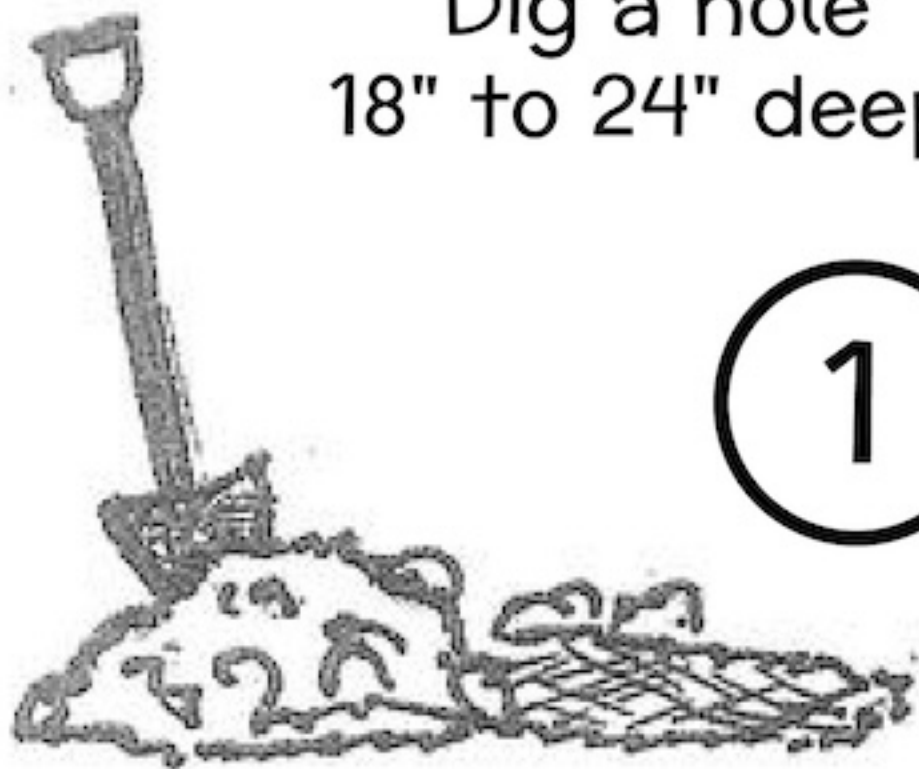


1


Insert a pressure-treated 4x4 post. Backfill with gravel or pea stone. Tamp down and check for level.

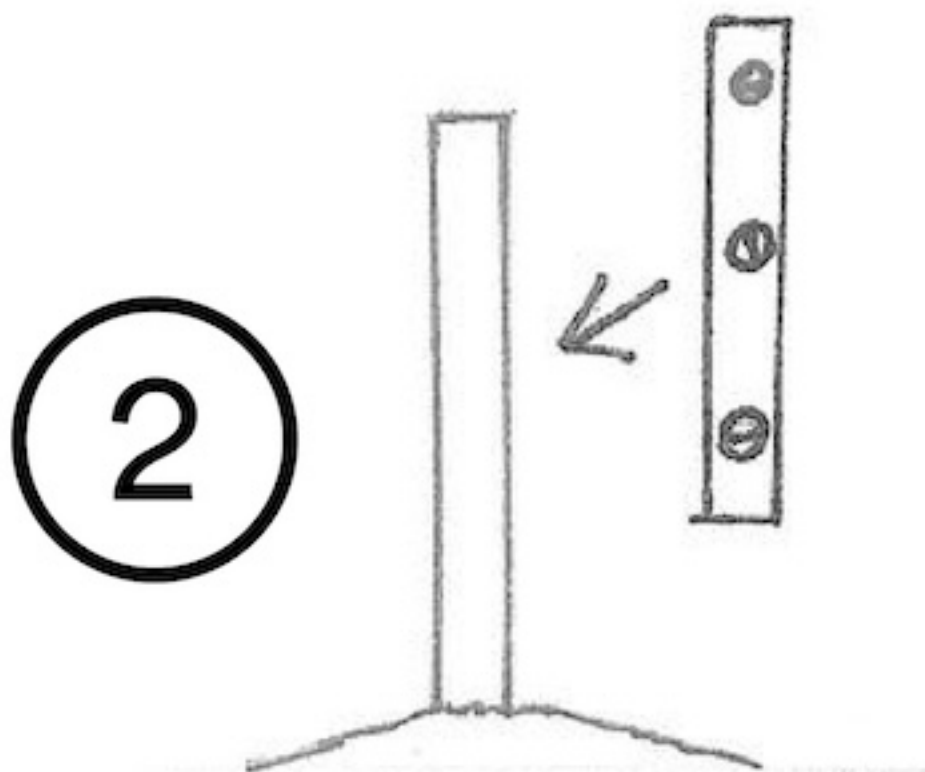

Fit base on post.
Secure using 1-5/8" deck
screws.

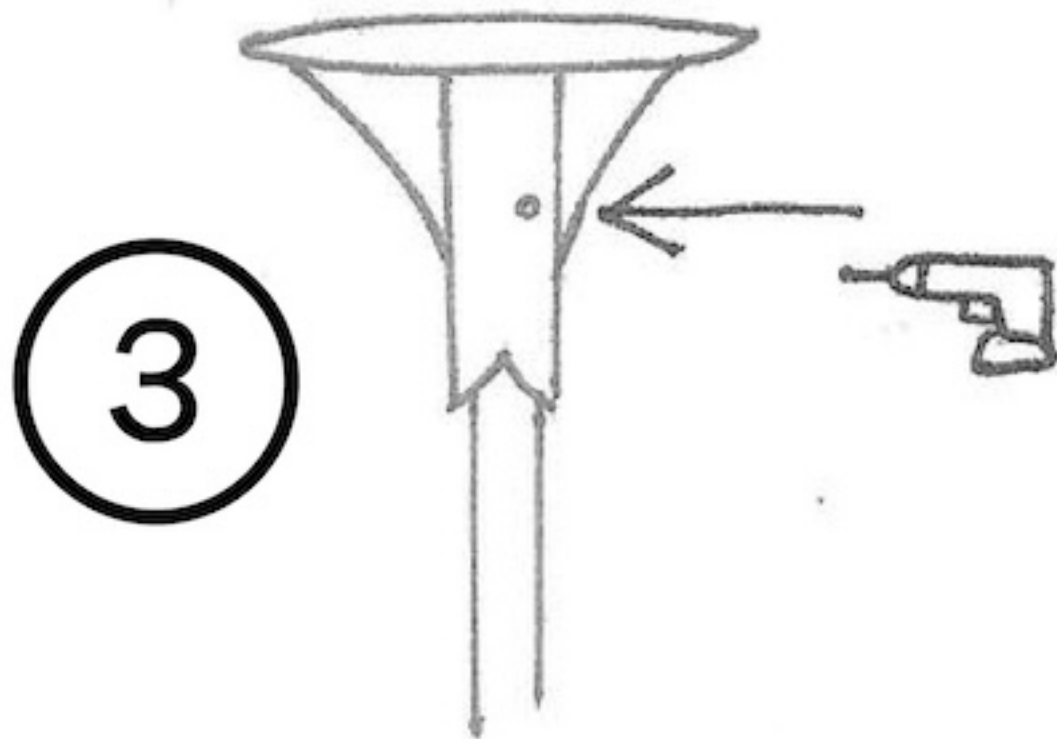


Fit birdhouse on base.
Check for equal overhang.
Secure through pilot holes.

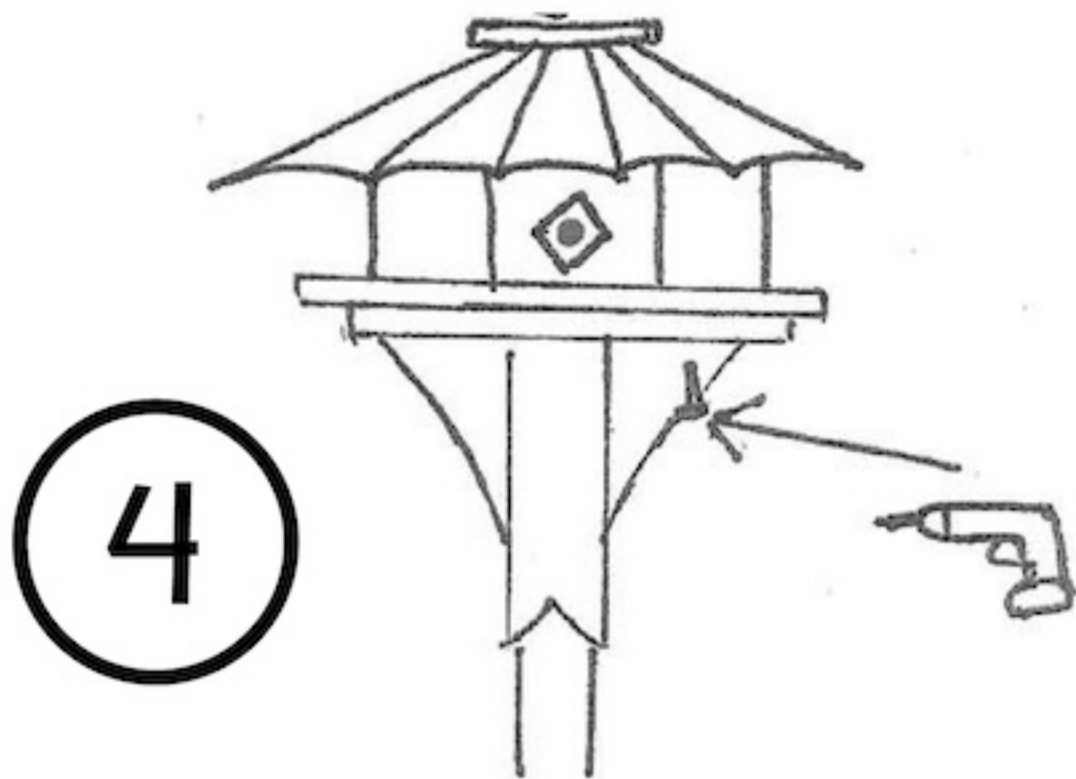

Enjoy Your Birdhouse!

5

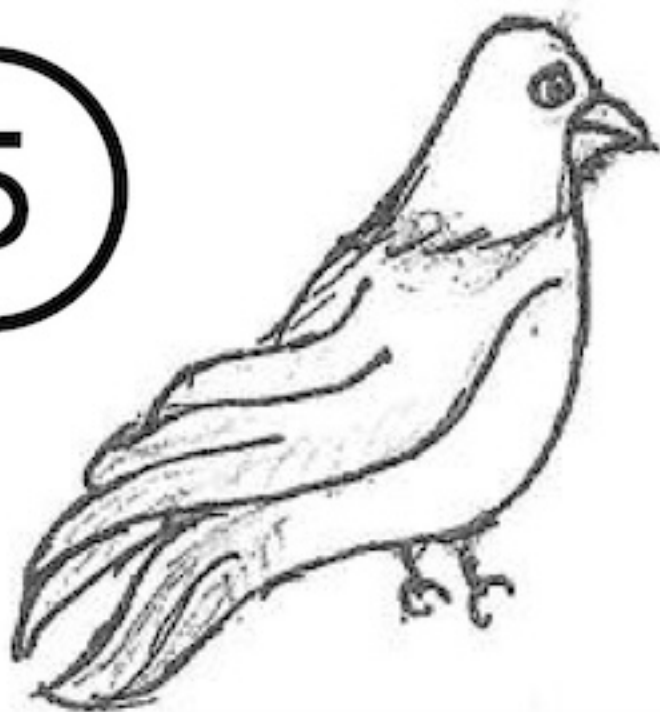

EricAviaries.com

Eric Kalwarczyk

774-402-1208

